

OPERATING INSTRUCTIONS

1. Function Select Switch
 - a. **DOWN** Position : Both fan and heat on.
 - b. **LEFT** Position : Heater turned off.
 - c. **UP** Position : Fan only on with no heat.
2. Fan Speed Control
 - a. Rotate right or clockwise for High Speed Fan.
 - b. Rotate left or counter clockwise for Low Speed
3. Swivel Knobs
To tilt heater up or down, loosen swivel knobs one side and retighten.
4. Connect spade terminal on in line fues holder to positive (+) post on vehicle battery.
5. Crimp spade terminal on black wire and connect to negative (-) post on vehicle battery.

WARNING

- THE USE OVER 1 HOUR IN HEAT POSITION WHEN THE ENGINE IS STOPPED, MAY CAUSE A BATTERY WEAKNESS.
- THE FAN POSITION DOES NOT HEAT BUT ONLY VENTILATES

