

# USER'S MANUAL FOR HIGH POWER MEGAPHONE

## Megaphone with Siren & Whistle



### Intended use



The Megaphone is intended for amplifying speeches, and for playing warning sounds at meetings, demonstrations, sports events etc.

**This model is one of reliable safety tool that can be an aid to emergency disaster (fire), natural disaster (earthquake, typhoon), and state of emergency, taking the role of prerequisite tool for guiding and instructing people at the time of extraordinary situation.**

### Safety instructions



Never use the megaphone pointed directly at a person's ear, or never sound an alarm, as permanent hearing impairment could result due to the high sound pressure.

Avoid exposure to rain during outdoor use. And always avoid storing the unit in humid locations. It may cause the quality deterioration. Do not fall down the product. The sound quality may be deteriorated because of the shock.

Please keep the batteries separately from the main unit after use.

It may cause defects because of the leakage of batteries.

Avoid exposure to direct sun light for long periods of time.

Never use chemicals such as thinner or benzene for cleaning.

It may cause the deformation of product.

### Features


- Easy to operate handheld megaphone..
- Speech and signal mode with two different warning sounds (siren and whistle sound).
- Anti-howling.

### Battery installation



Observe correct polarity while inserting the batteries. Remove the batteries if the device is not used for a long period of time to avoid damage through leaking.

**Replace all the batteries at the same time. Mixing old and new batteries in the device can lead to battery leakage and device damage. Make sure that batteries are not dismantled, short-circuited or thrown into fire. Never recharge non-rechargeable batteries. There is a risk of explosion!**

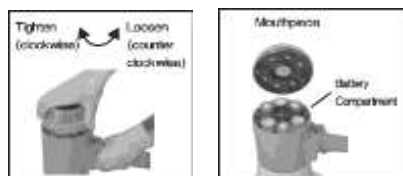

- Remove the microphone mouthpiece by turning counter clockwise.
- Insert 6 CM-size(1.5V each) batteries, observing the polarity direction indicated on the outer wall of the cap holder.
- Replace the microphone mouthpiece by turning fully clockwise.

### Operation



**Never point the Megaphone directly at persons or animals. To avoid damaging of the hearing, ensure sufficient distance to persons and ensure a reasonable volume adjustment!**

- The Megaphone possesses 3 operating modes which can be selected by means of the toggle switch behind the handle.



Signal mode with whistle sound

M I C Speech mode



Signal mode with siren sound

- Hold the grip of the megaphone and pull the trigger switch back with your index finger
- Select the desired operating mode.
- In speech mode (toggle switch on position M I C), speak with sufficient voice through the microphone mouthpiece bringing it close to your lips
- Turn the volume control to adjust the level to optimum without causing howling.

**Note: The level of volume of siren/whistle is fixed, and cannot be adjusted with the volume control.**

### Maintenance

Clean the appliance with a dry cloth. Do not use abrasive materials, or solvents!

### Disposal



#### Dispose of waste electrical and electronic equipment

In order to preserve, protect and improve the quality of environment, protect human health and utilize natural resources prudently and rationally, the user should return unserviceable product to relevant facilities in accordance with statutory regulations.

### Technical Data

Operating voltage:	9 VDC
Batteries:	6pcs x 1,5 V (cell type CM, R14)
Output:	Max 30 W, Rated 22W
Acoustic range:	350m(382 yards) (built-up areas) 1000 m(1,094 yards) (open space)
Battery life(continuous use)	8 hr. (voice)
Length:	375 mm(14.76 inch)
Horn diameter:	211 Ø(8.30 inch)
Weight (without batteries):	1.7 kg(3.747 lb)