

Place the water-proof ring with O-ring on the mounting hole first. Fasten the clear lid / conversion solar kit to the water-proof ring using 3 s.s. wood screws (M4 x 43mm length) as fig. 1.

Install the stainless cover or white plastic cover on the clear lid / conversion solar kit by using 4 self-tapping screws (M4 x 12mm length) as fig. 2.

Secure the white mounting ring on the underside of the mounting hole to finish the assembly as fig. 3.

Clear lid or  
Conversion  
solar kit

Water-proof  
ring w/ O-ring

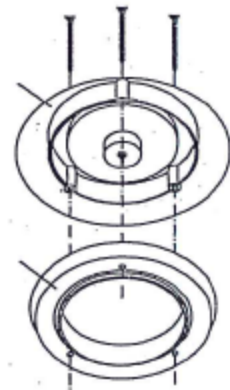


Fig. 1

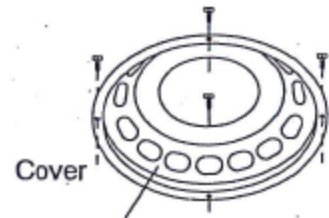


Fig. 2

Mounting  
ring

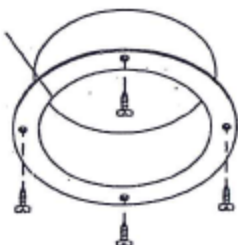


Fig. 3